 


HOW TO CHANGE EQ PRESETS ON SPOTTUNE STREAM



Spottune

1. CHANGE THE STREAM TO PAIRING MODE

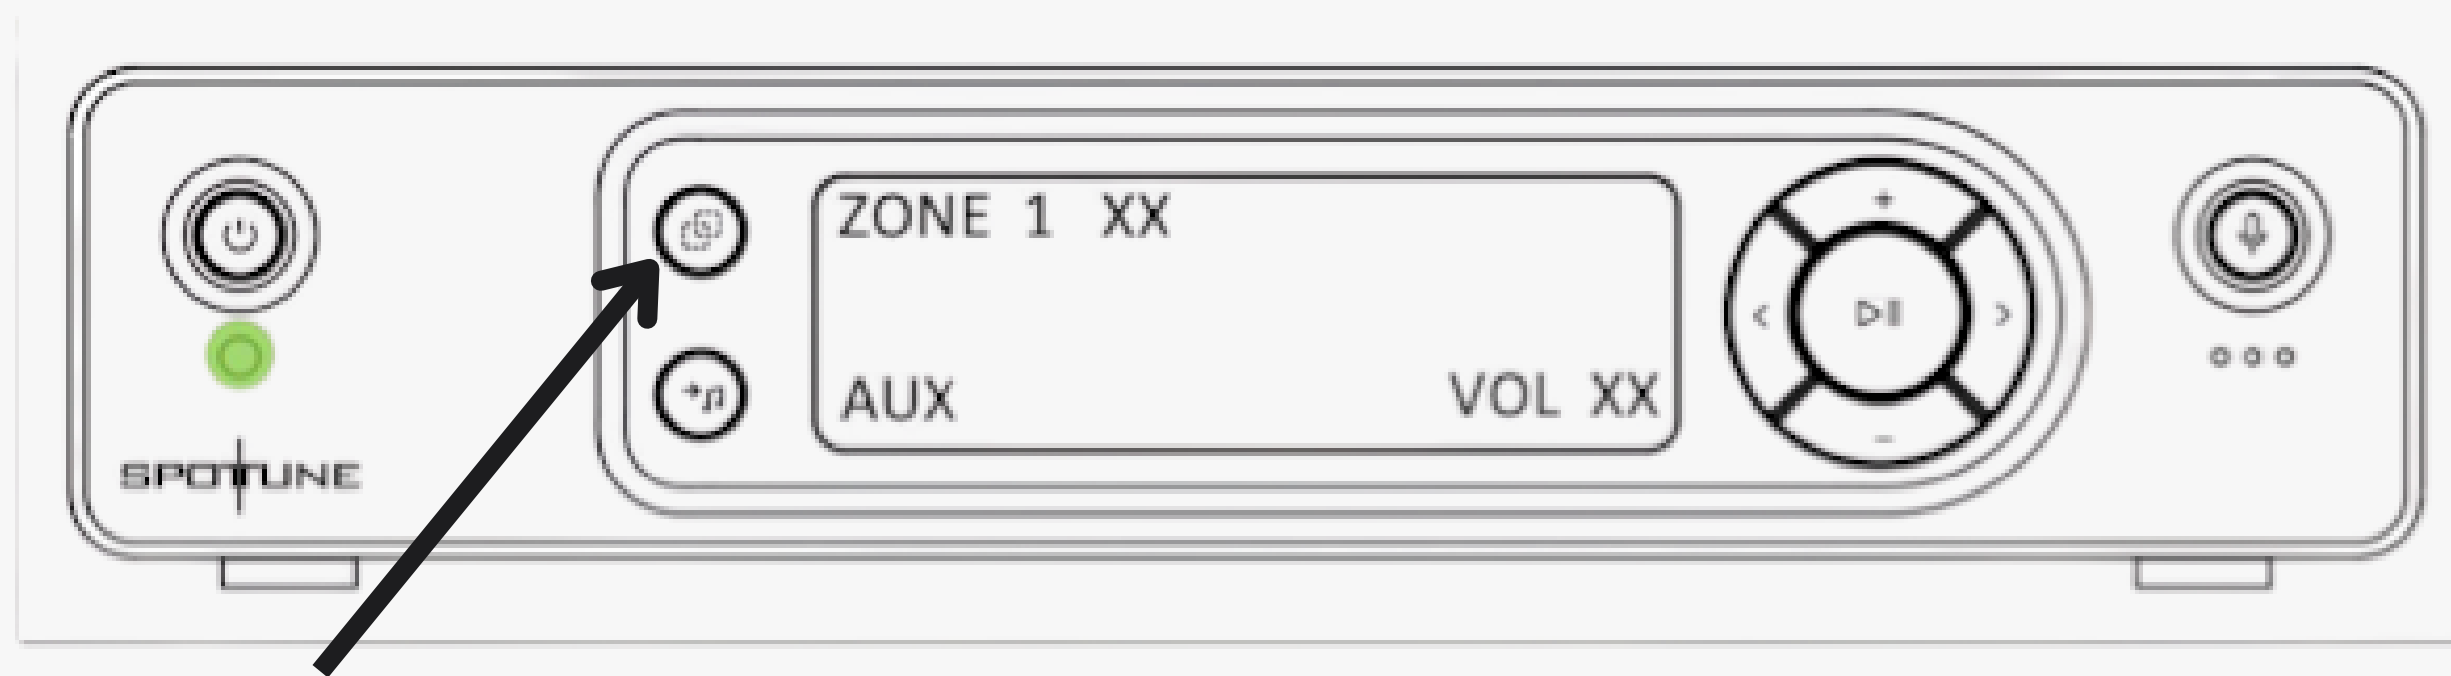

PRESS AND
HOLD THE
“ZONE”-
BUTTON FOR 5
SECONDS, TO
ENTER
PAIRING MODE

2. GO TO STREAM SETTING



PRESS THE
“INPUT”-
BUTTON ONCE,
TO ENTER
STREAM
SETTINGS

3. SCROLL TO PRESETS



WHEN IN STREAM SETTINGS, SCROLL
DOWN TO
"ZONE1 PRESET" AND "ZONE2 PRESET"
USING THE "VOLUME DOWN"-BUTTON

4. EDIT PRESET



WHEN ON
"ZONE1 PRESET" OR "ZONE2 PRESET"
PRESS THE "PLAY"-BUTTON TO ENTER
THE PRESET ADJUSTMENT MODE

5. EDIT PRESET



WHEN IN
THE PRESET ADJUSTMENT MODE USE
THE "VOLUME UP OR DOWN"-BUTTON
TO SCROLL THROUGH PRESETS

PRESETS EXPLAINED



 
Spottune

PRESET NULL - EXPLAINED

PRESET NULL:

REGULAR EQ

USE CASE: GOOD FOR MOST RETAIL AND HOSPITALITY ENVIRONMENTS

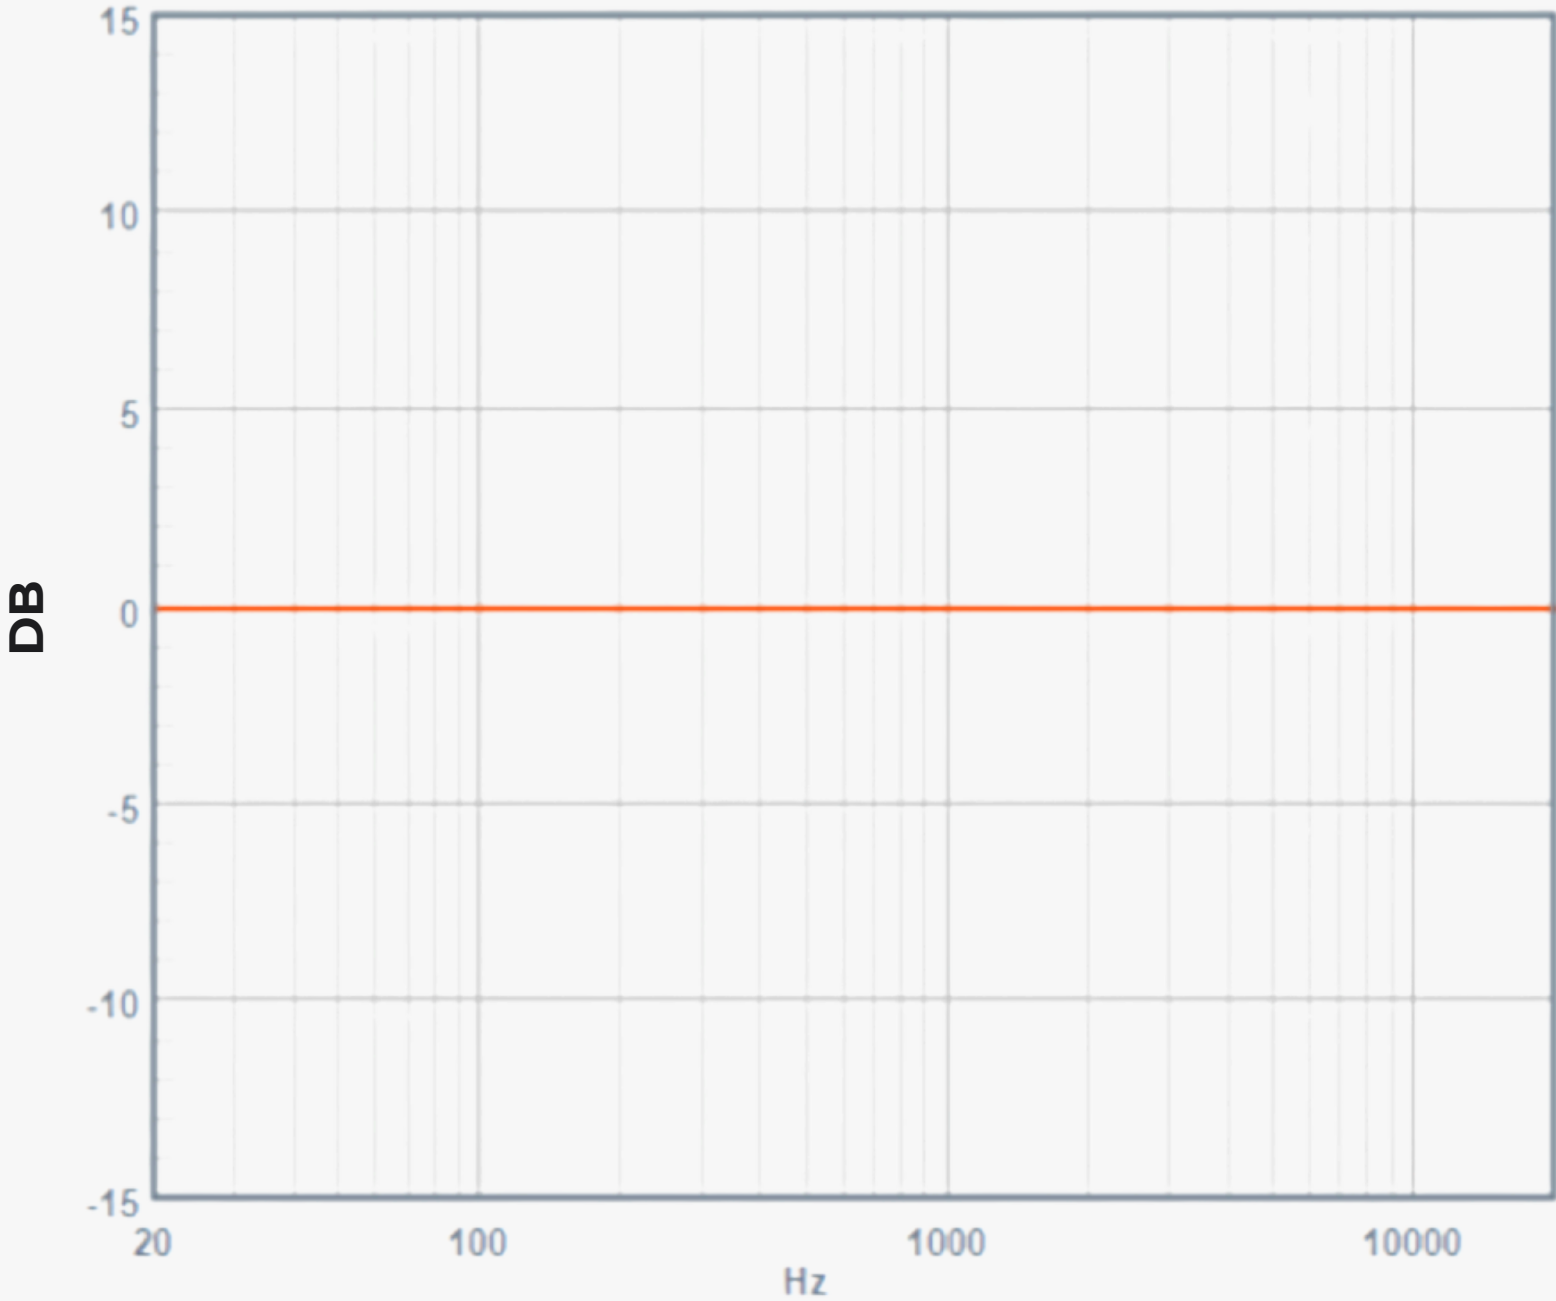


PRESET -1 - EXPLAINED

PRESET -1:

INCREASED BASS

 USE CASE: RETAIL SPACES WITH A YOUTHFUL VIBE,
LOUNGE BARS, RESTAURANTS

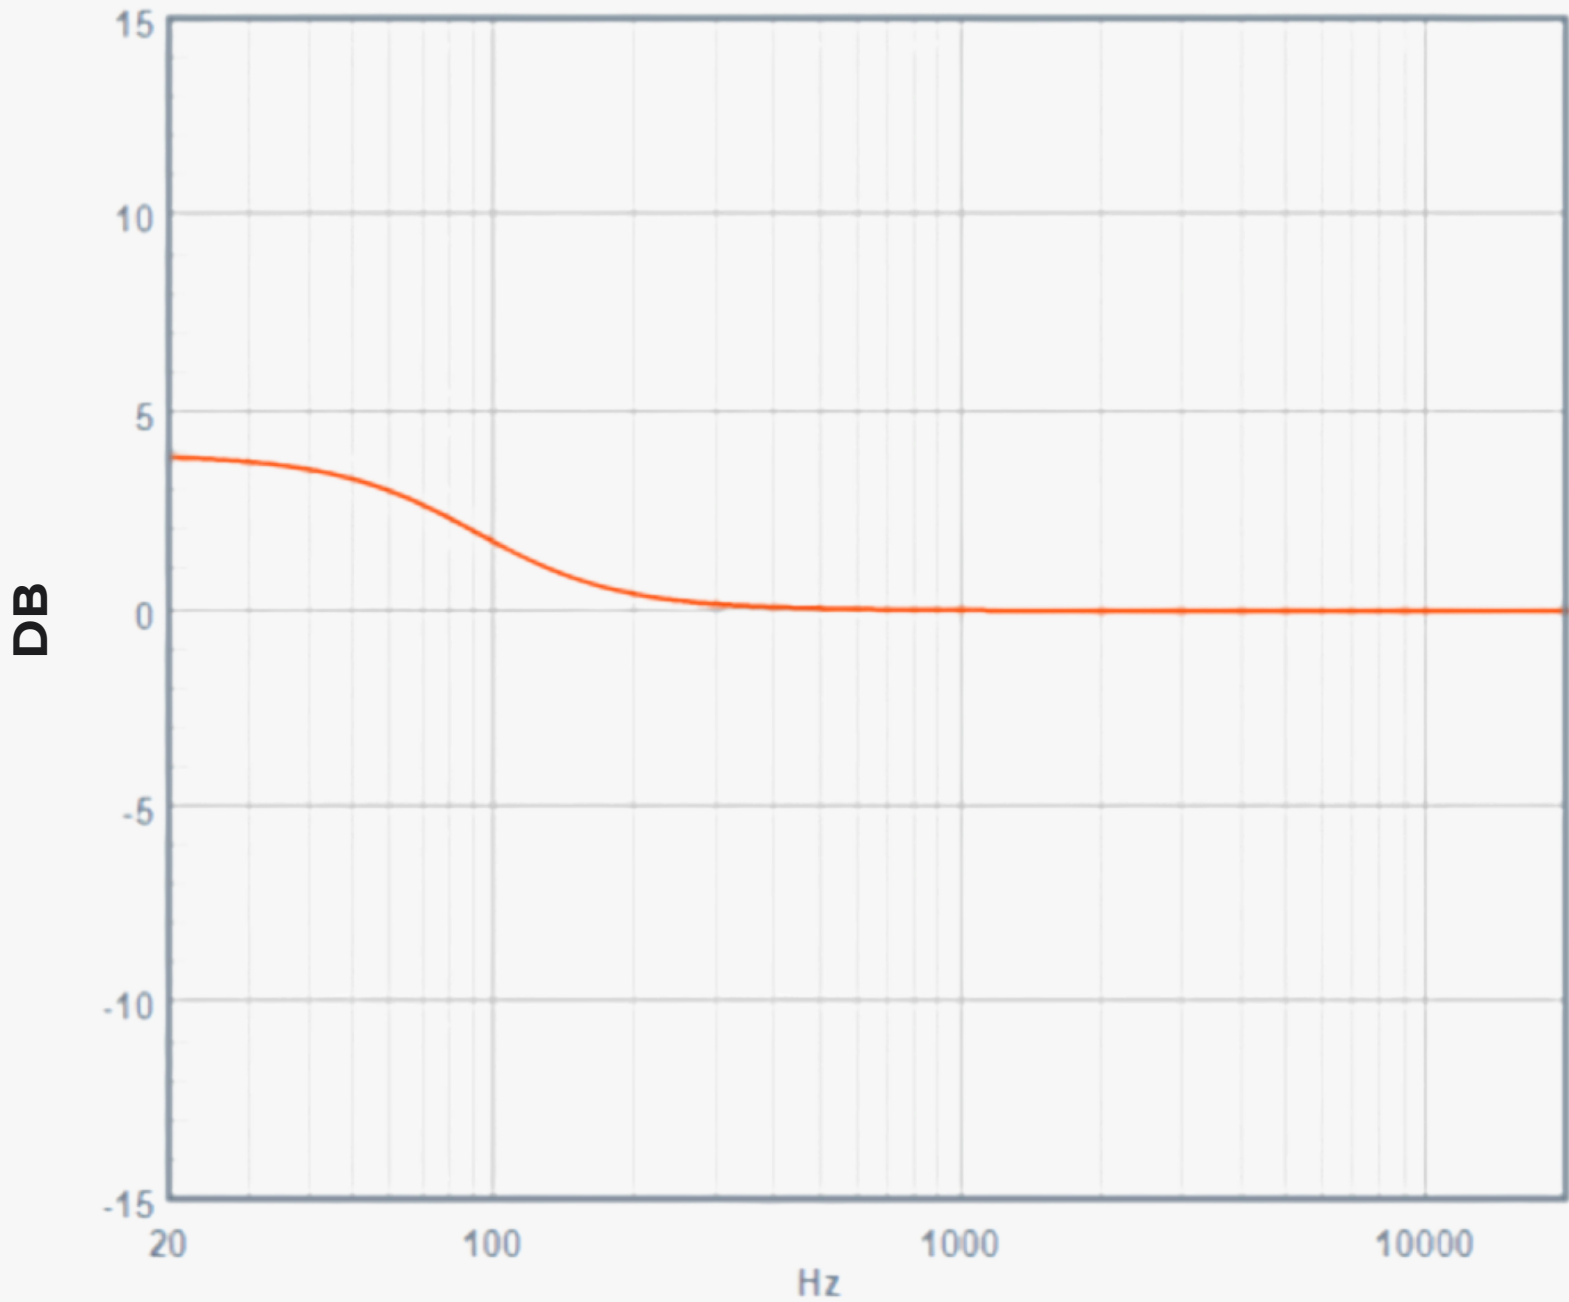


PRESET -2 - EXPLAINED

PRESET -2:

DECREASED BASS

 USE CASE: HIGH END RETAIL REQUIRING NEUTRAL
SOUNDSCAPES, QUITE HOSPITALITY ENVIRONMENTS

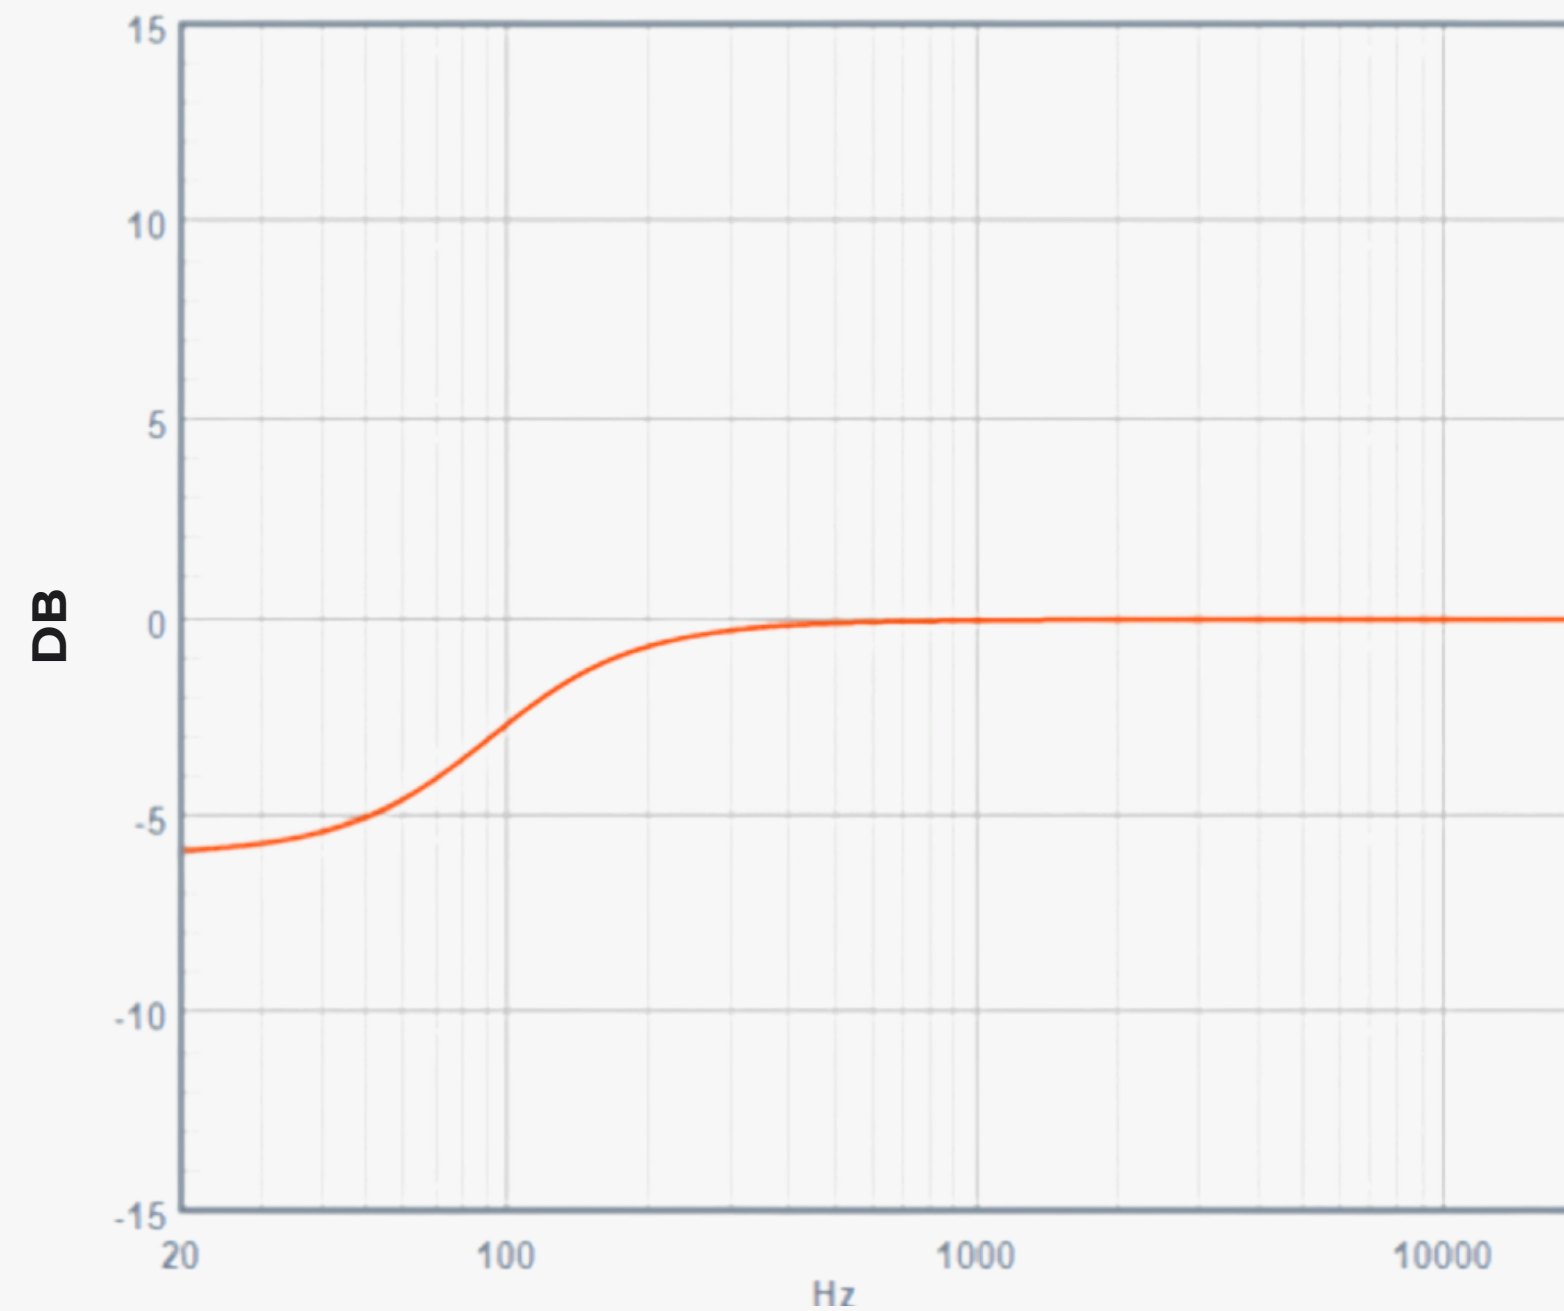


PRESET -3 - EXPLAINED

PRESET -3:

INCREASED TREBLE

 USE CASE: HIGH END RETAIL REQUIRING NEUTRAL
SOUNDSCAPES, QUITE HOSPITALITY ENVIRONMENTS

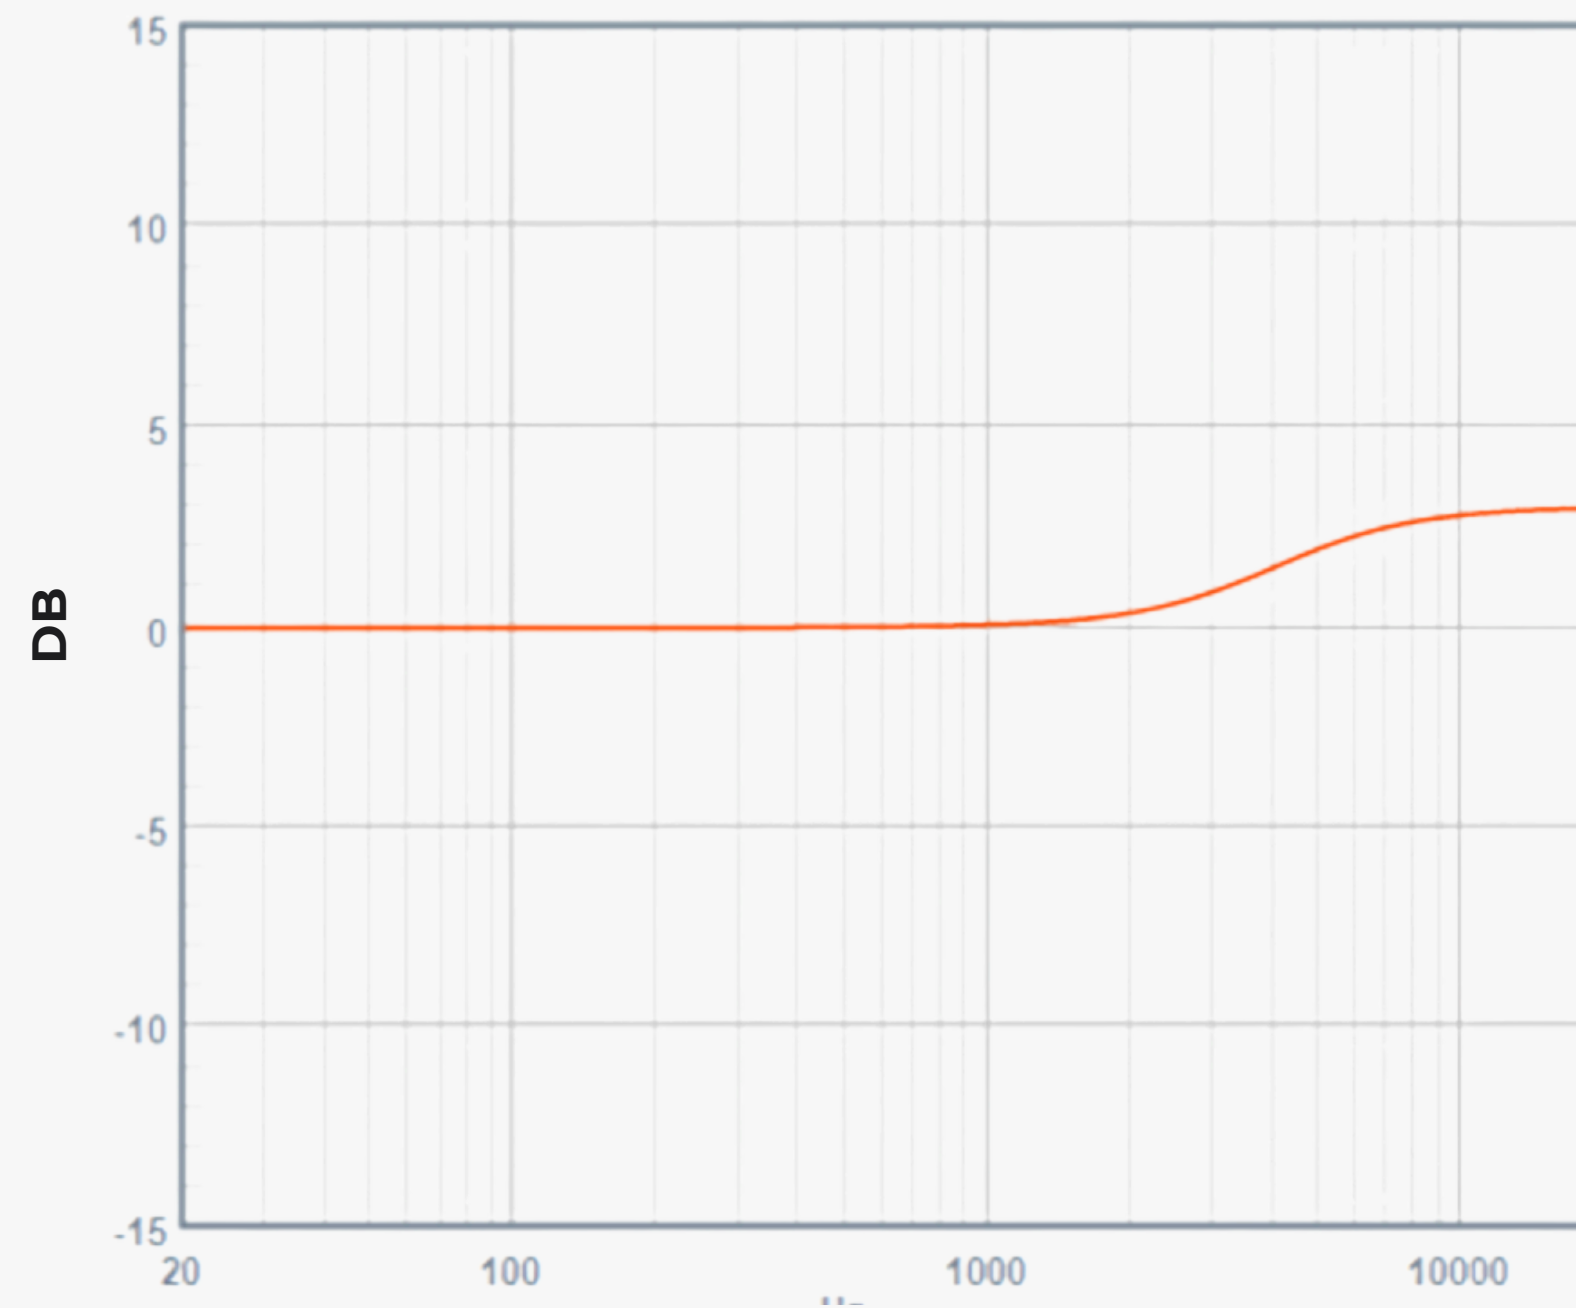


PRESET -4 - EXPLAINED

PRESET -4:

DECREASED TREBLE

 
USE CASE: USE CASE: HOSPITALITY & RETAIL
ENVIRONMENTS REQUIRING A WARM, SOFT AMBIENCE

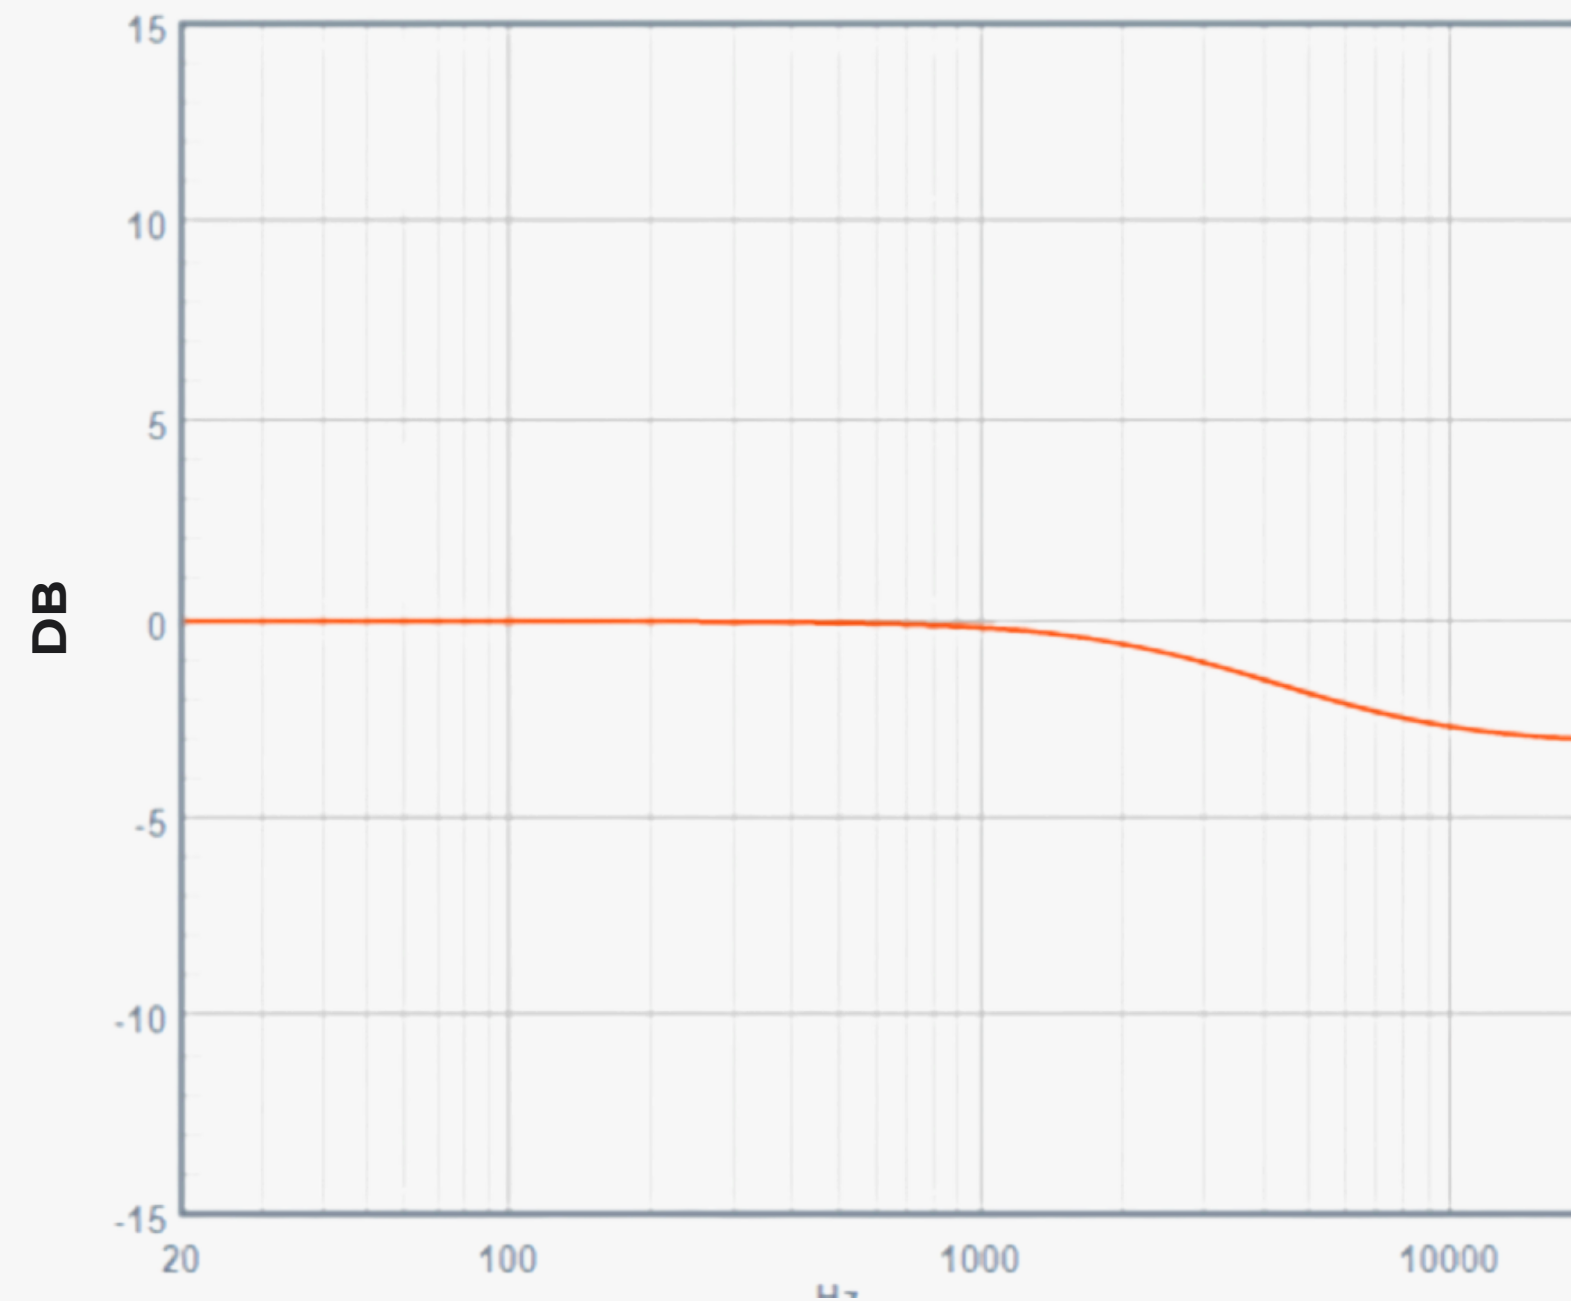

PRESET -5 - EXPLAINED

PRESET -5: INCREASED BASS, DECREASED TREBLE

 
USE CASE: RETAIL AND HOSPITALITY ENVIRONMENTS,
WHO PLAY “CLUB MUSIC”

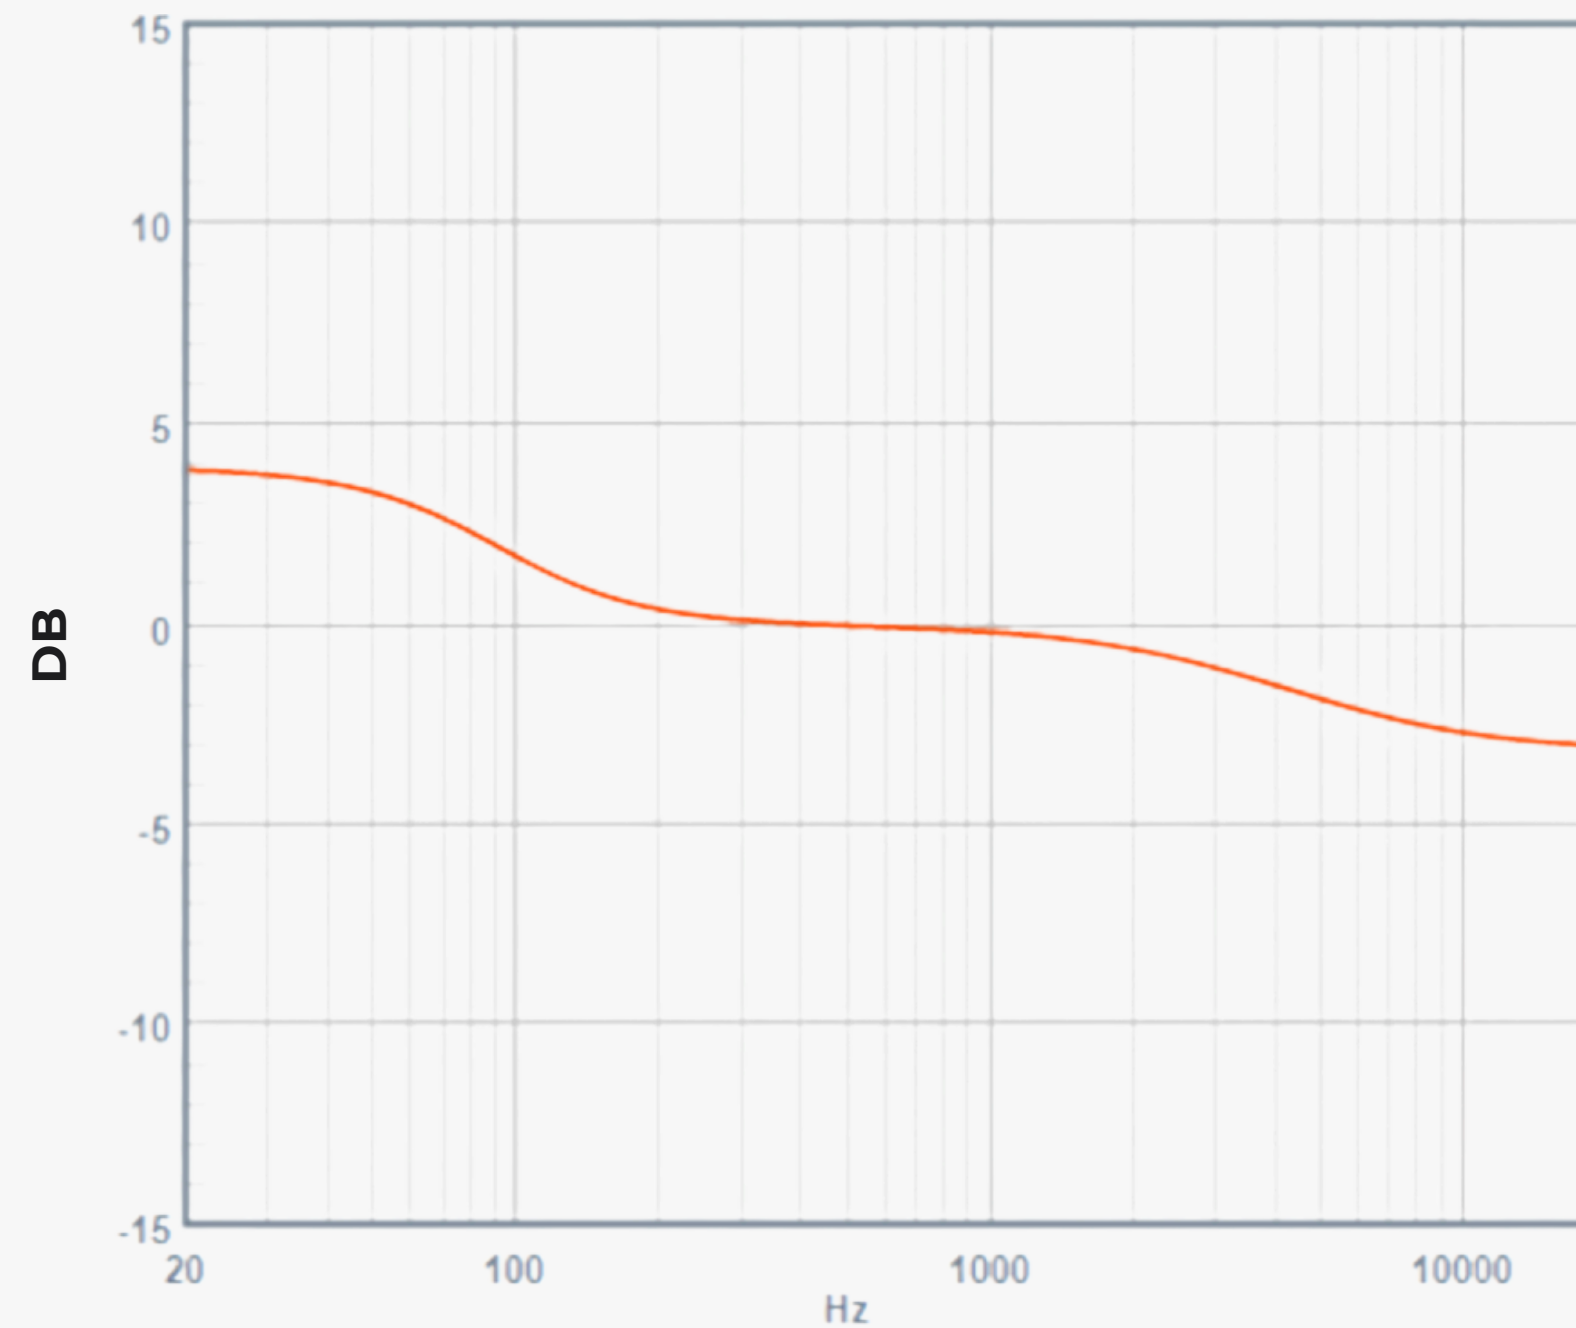

PRESET -6 - EXPLAINED

PRESET -6: DECREASED BASS, INCREASED TREBLE

 USE CASE: RETAIL AND HOSPITALITY ENVIRONMENTS,
WHO PLAY “CLUB MUSIC”

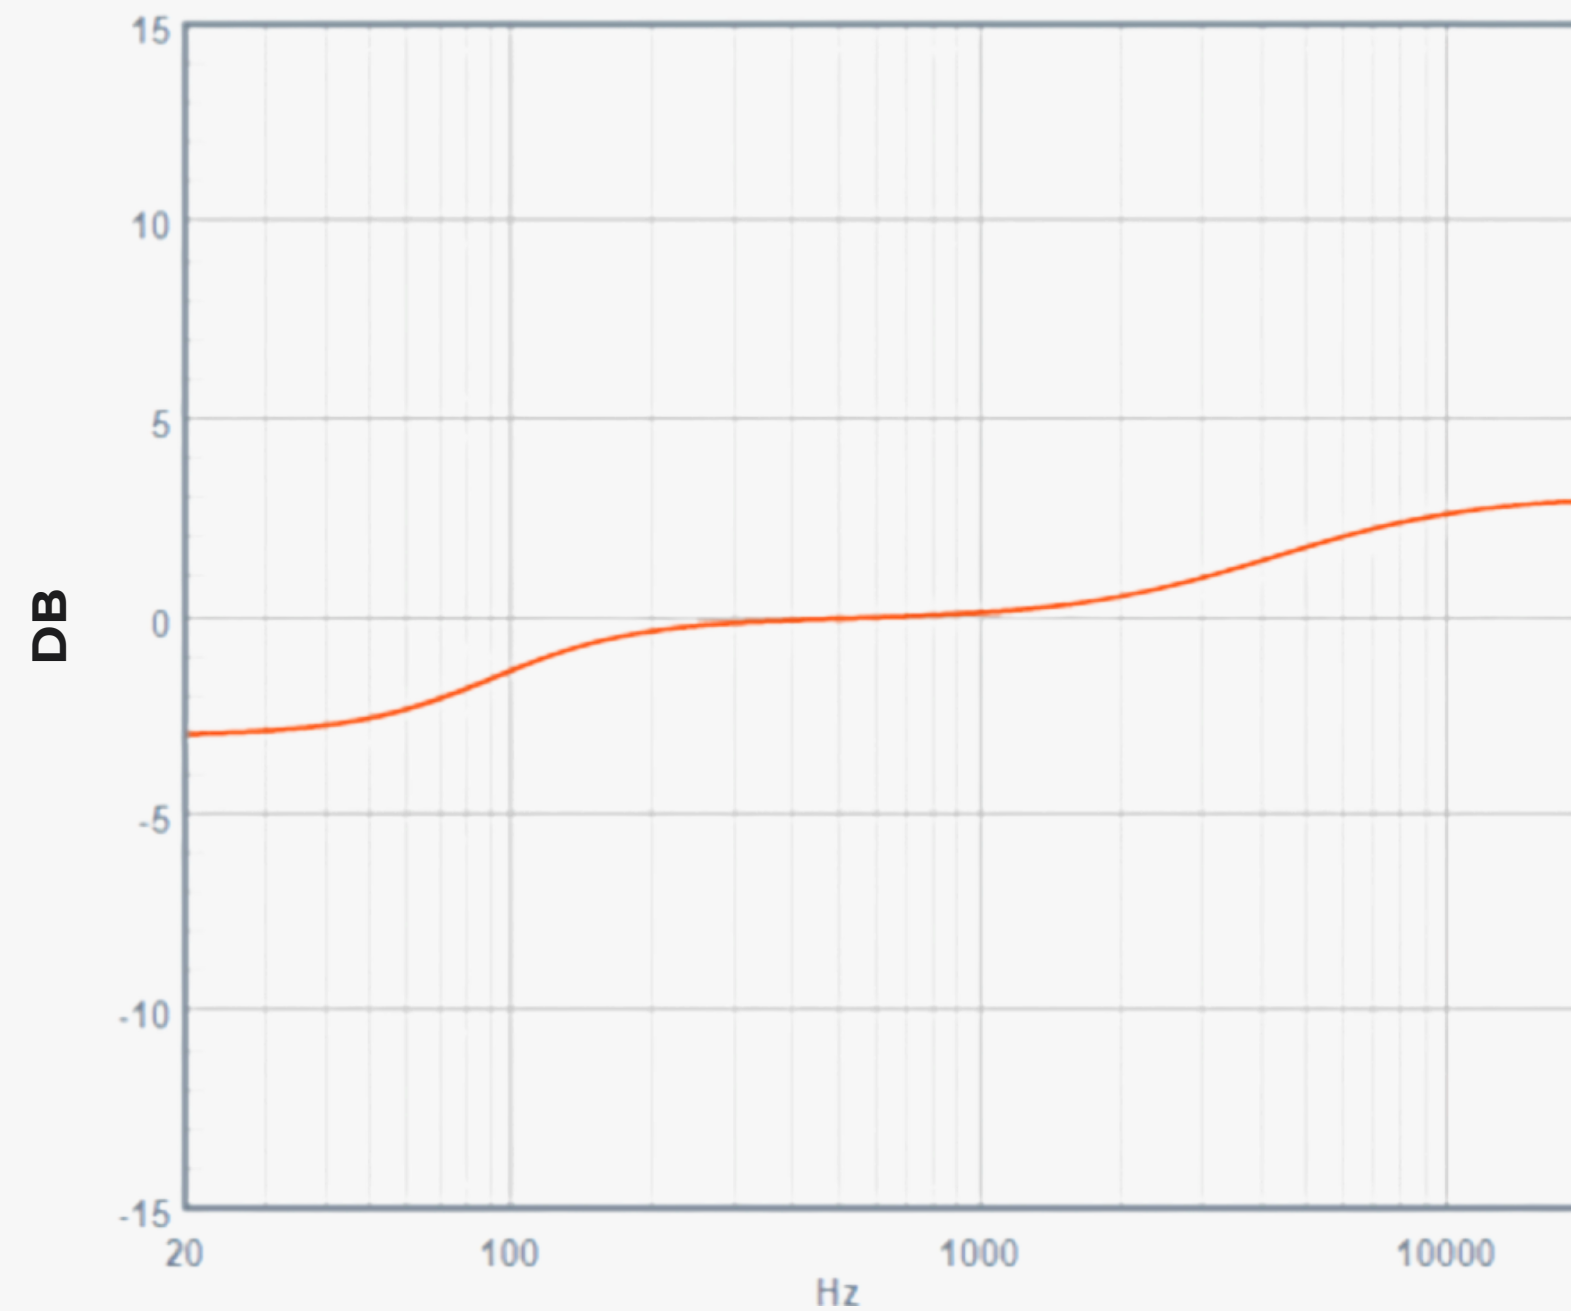


PRESET -7 - EXPLAINED

PRESET -7:

DECREASED TREBLE (SPIKED)

 USE CASE: RETAIL AND HOSPITALITY ENVIRONMENTS,
WHERE MANY HARD SURFACES (GLASS OR CONCRETE)
ARE PRESENT

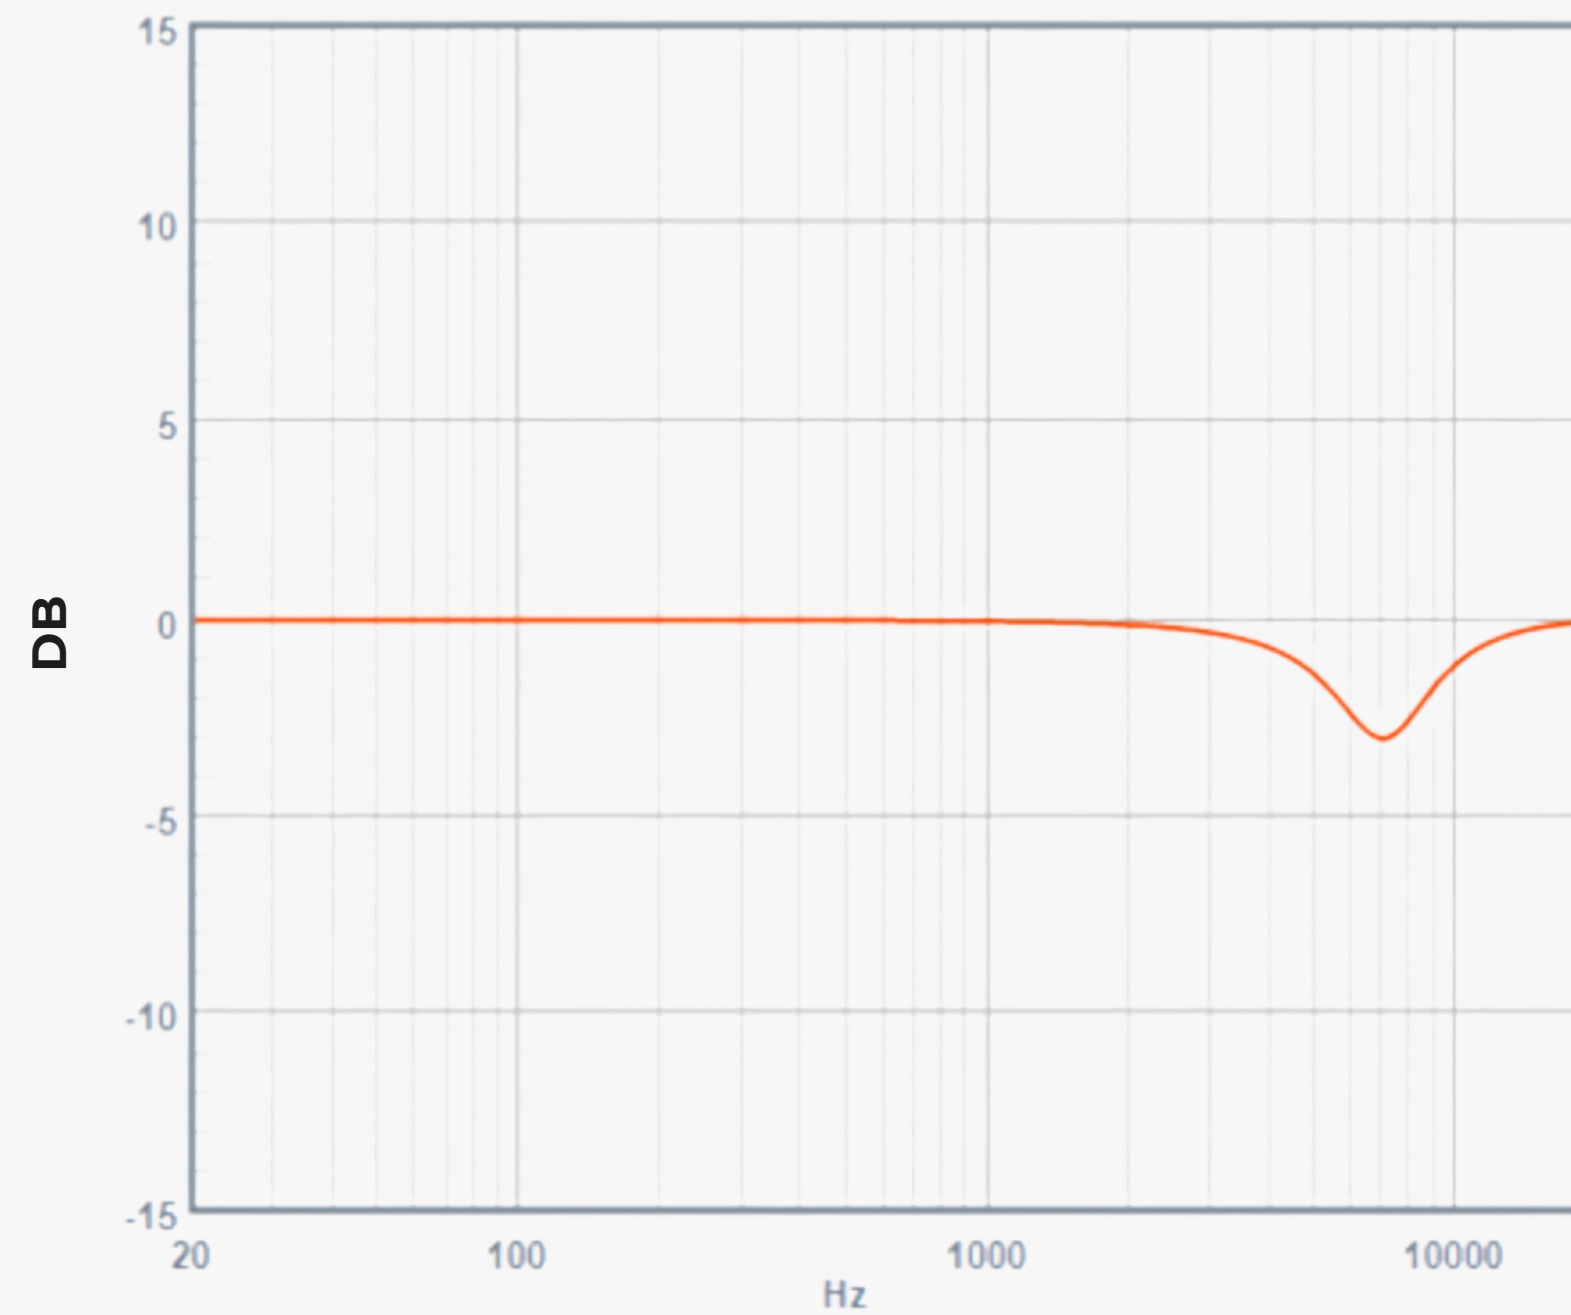


PRESET -8 - EXPLAINED

PRESET -8:


INCREASED MID'S

 USE CASE: RETAIL AND HOSPITALITY ENVIRONMENTS,
WHICH PRIMARILY PLAY SPEAKING OR
ANNOUNCEMENTS

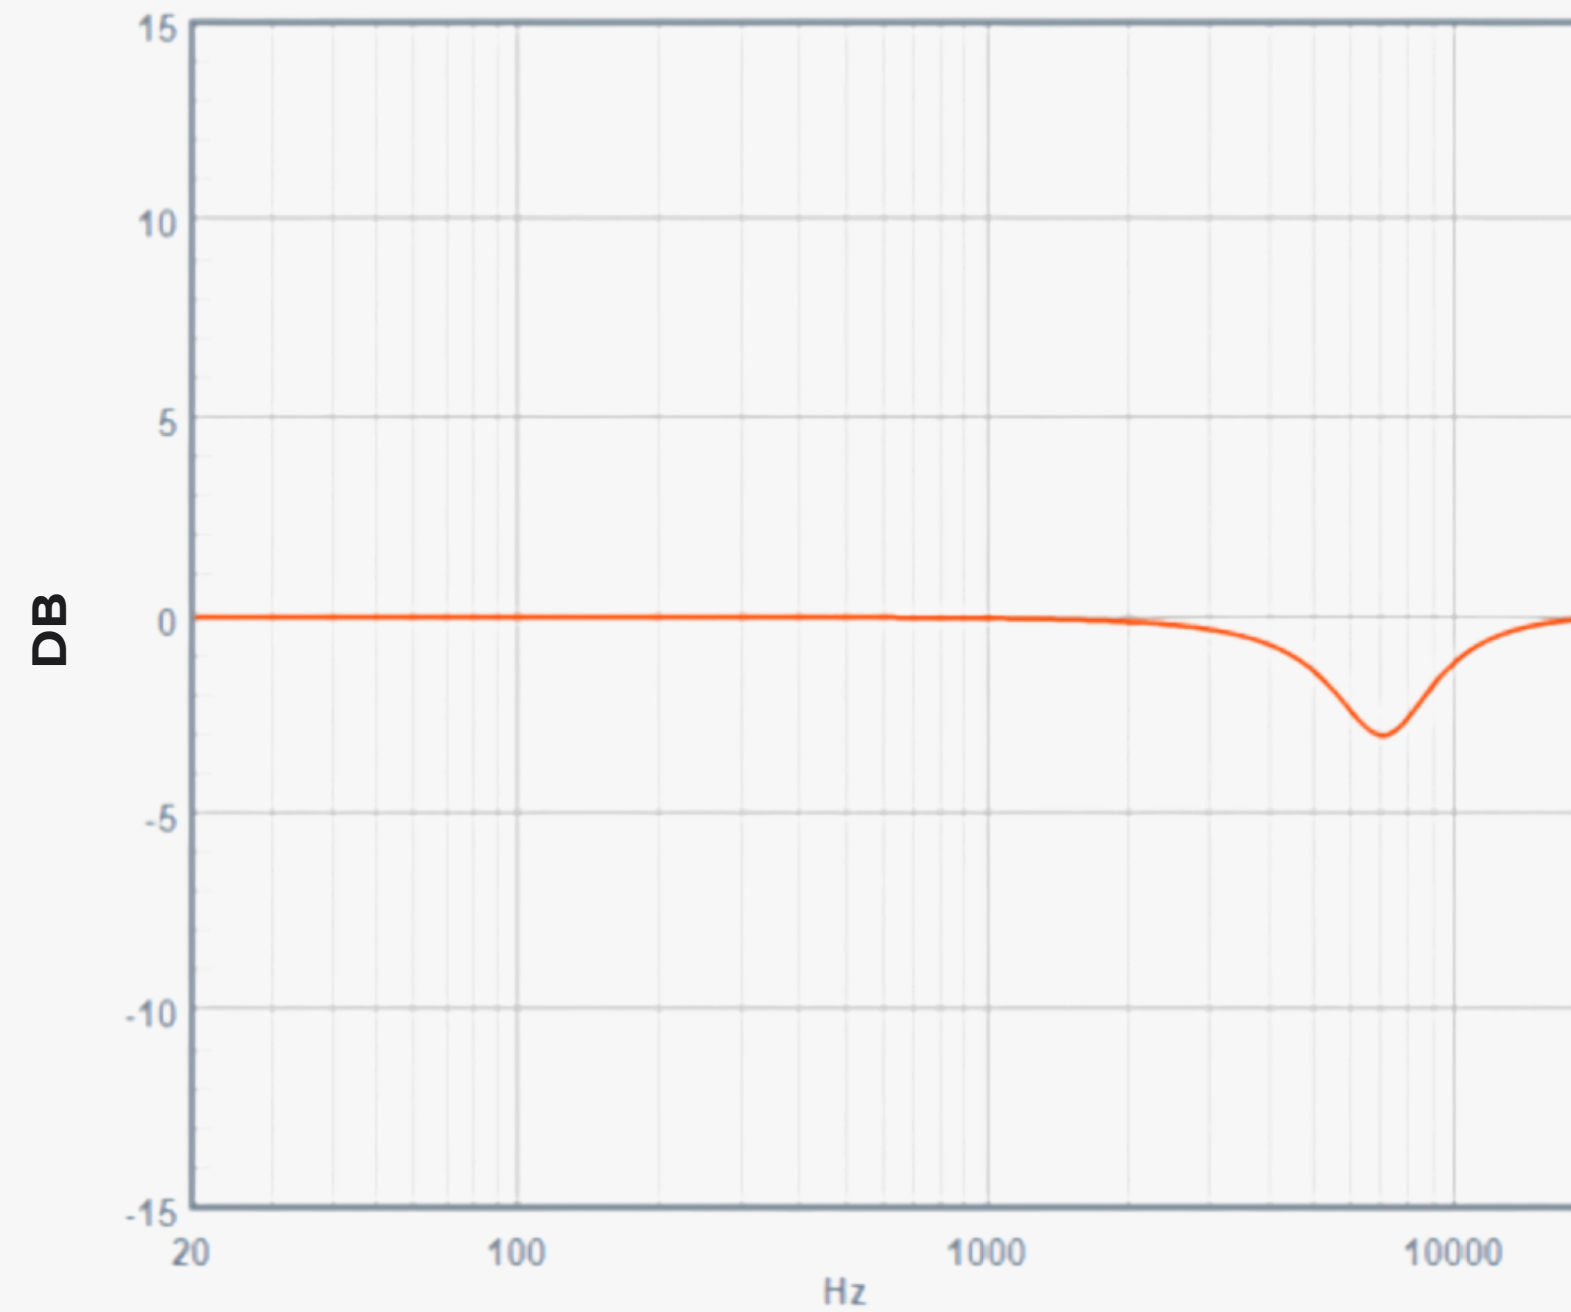

PRESET -9 - EXPLAINED

 PRESET -9:
FOR CEILING MOUNT (RECESSED)
USE CASE: FOR SPOTTUNE RECESSED SPEAKERS

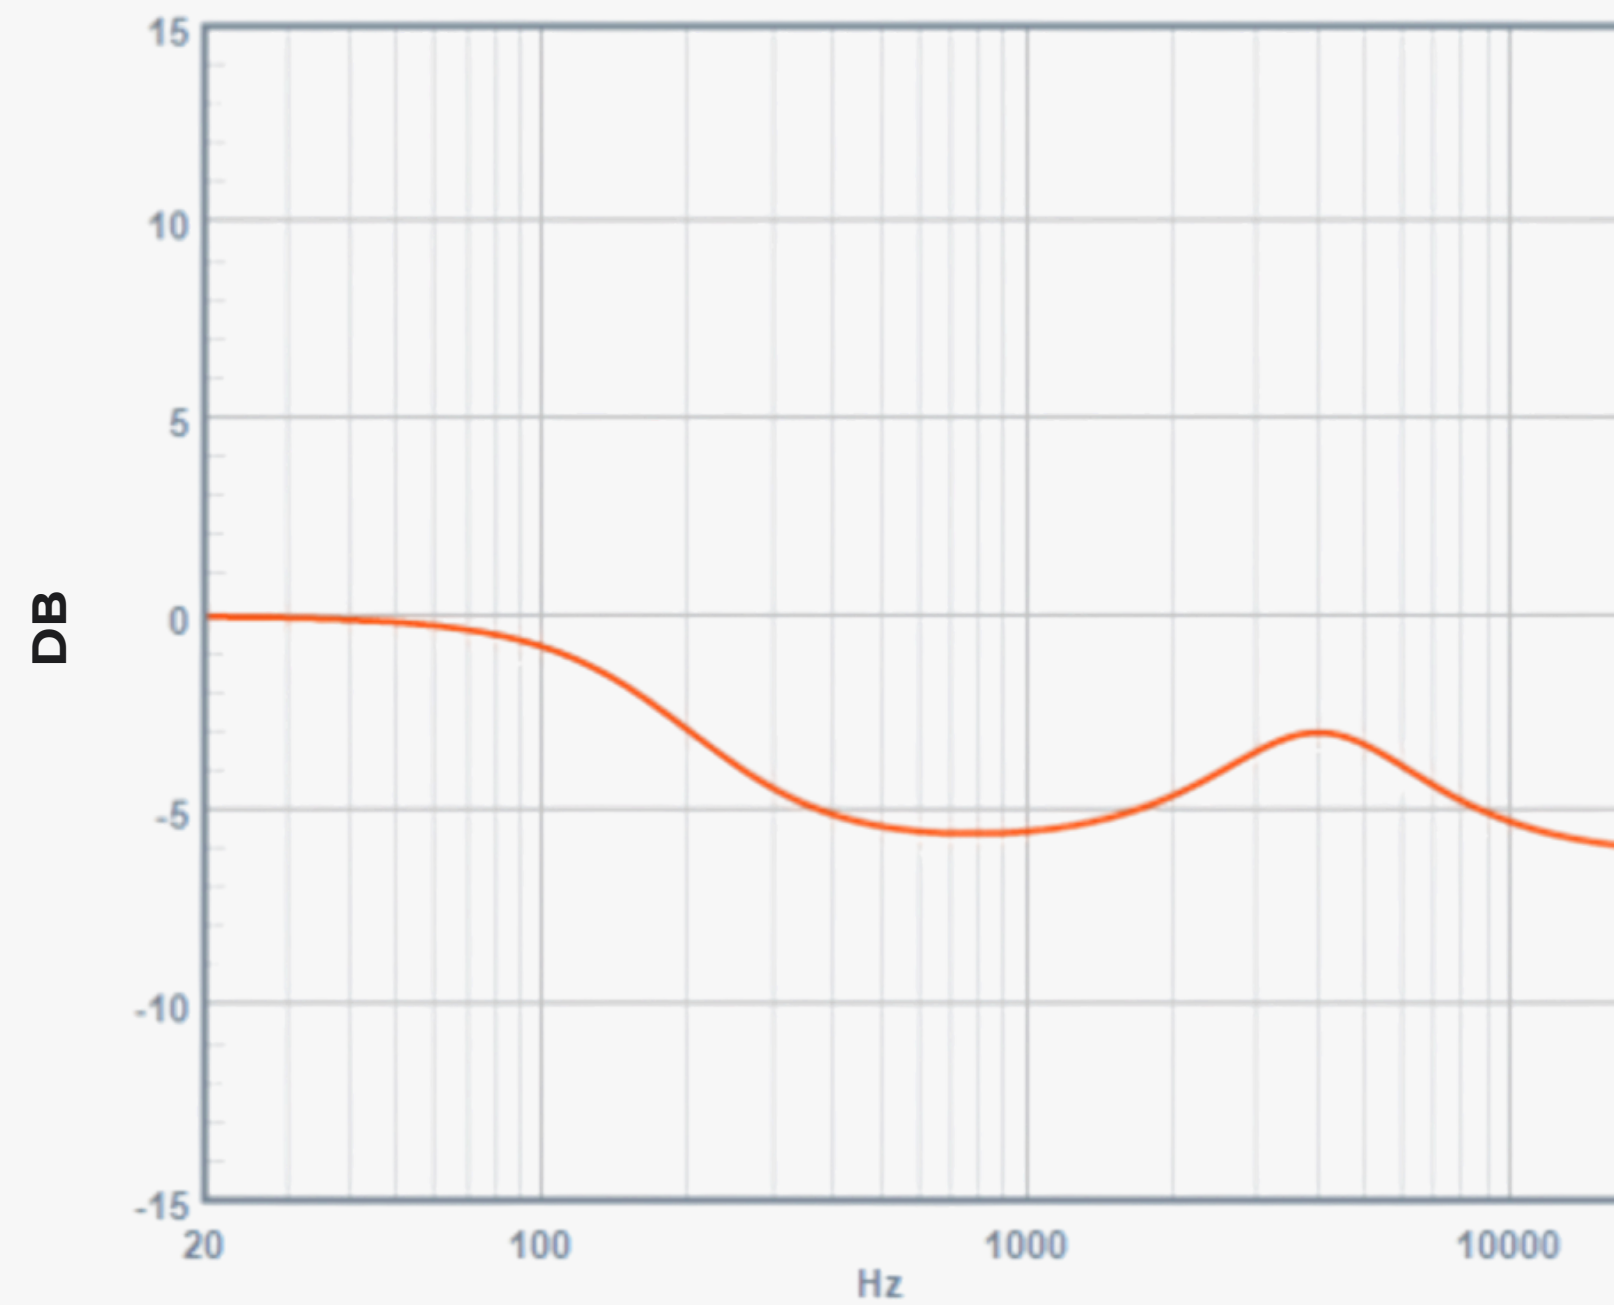

6. CONFIRM PRESET



WHEN DESIRED PRESET
IS FOUND, PRESS THE "PLAY"-BUTTON
TO CONFIRM

7. PRESET CONFIRMED



 
**ZONE1 PRESET IS NOW CHANGED -
REMEMBER TO ALSO CHANGE THE
ZONE2 PRESET, IF A PRESET IS
REQUIRED FOR BOTH ZONES**

8. EXIT STREAM SETTINGS



PRESS THE
“INPUT”-BUTTON
ONCE, TO EXIT
STREAM SETTINGS

9. EXIT PAIRING MODE

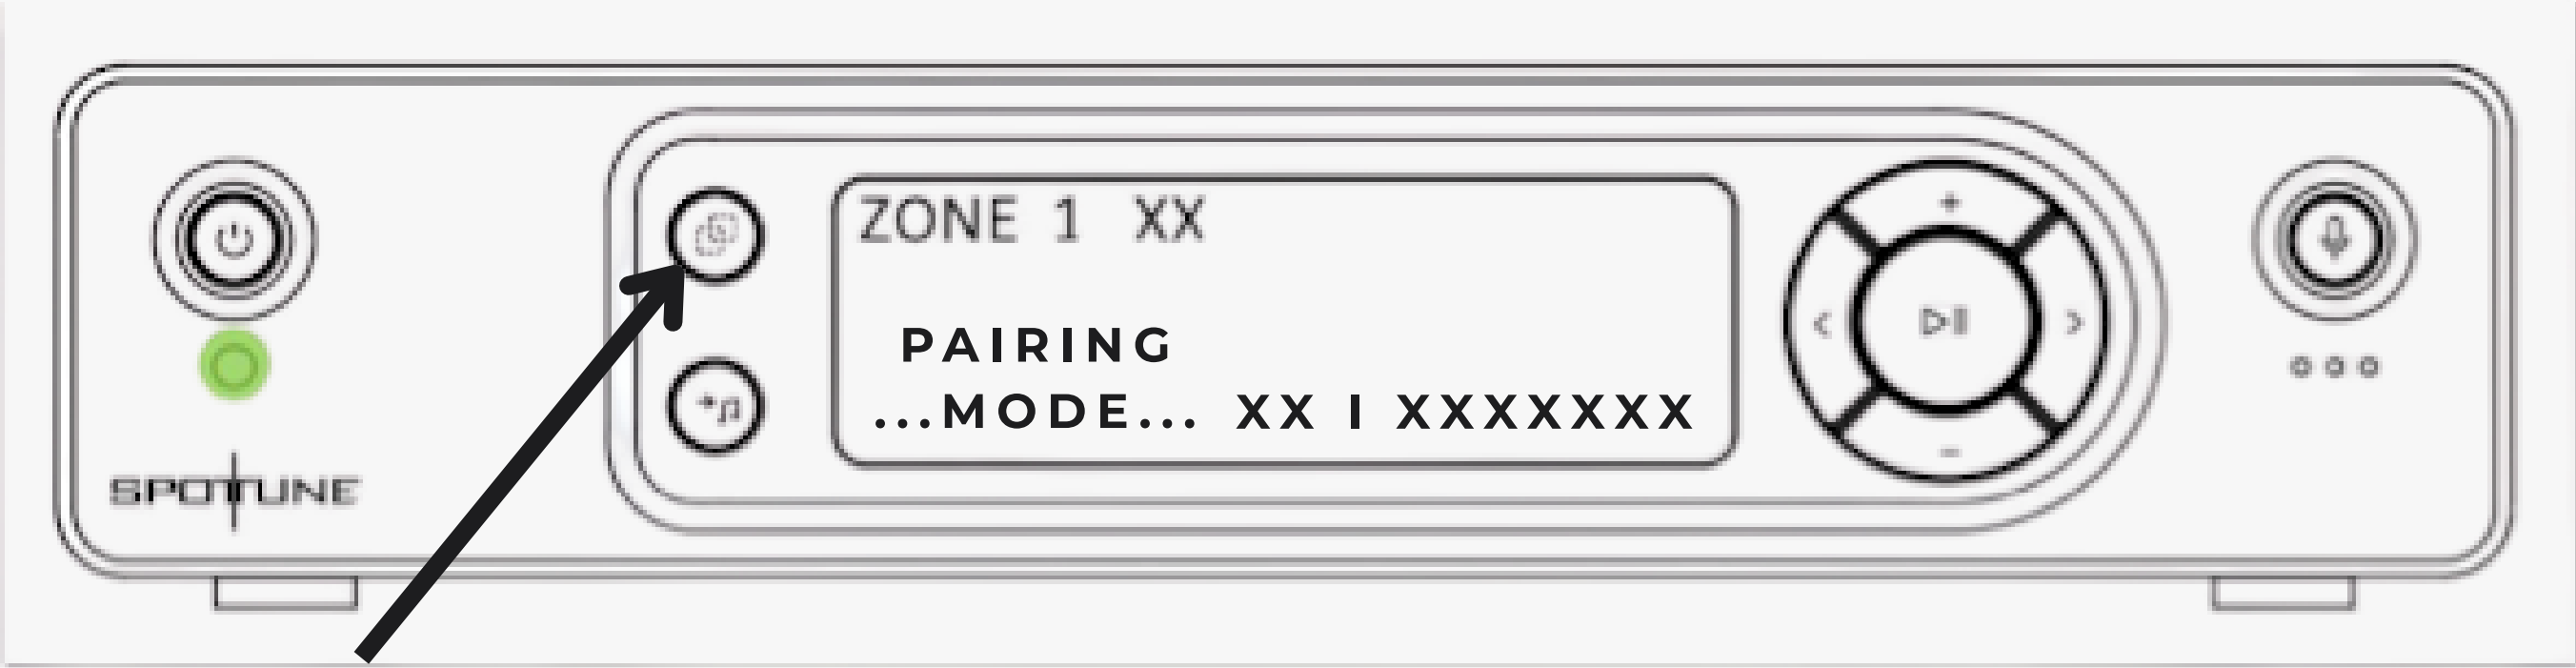

PRESS AND
HOLD "ZONE"-
BUTTON FOR 5
SECONDS, TO
EXIT PAIRING
MODE

**DONE! - PRESET IS NOW
CHANGED**



Spottune